

360 Pro Hunting Blind Setup Instructions



Safety

At no time shall 360 Hunting Blinds be liable for any accidents due to falls from the hunting blind. We recommend that you follow standard safety procedures when entering and exiting the blind, such as the use of safety harnesses, climbing ropes, etc.

1

Your kit contains individual wall panels and roof and floor sections.

If you purchased a tower stand kit, please assemble that first.



2

the floor has numbered sections that correspond with numbers on the wall panels so you'll know exactly where to install each panel.



3

If you purchased the carpet upgrade, install that now. You can use any flush face screw - short drywall screws work great.



4

Fasten the carpet in several spots to hold it in place.



5

Install panel 1. Pay special attention to the corners to make sure you are aligning them perfectly.



6

Screws are provide with each panel. Screw the first panel to the floor to hold it in place.



7

Add a bead of weatherproofing silicone between the wall sections as you install them.




8

Pre-drilled screws are included in the wall panels for quick assembly.



9

Screw the wall panels to each other using the screws shown in this step, but wait to screw the wall panels to the floor (except for the first panel) until all the panels are in place.

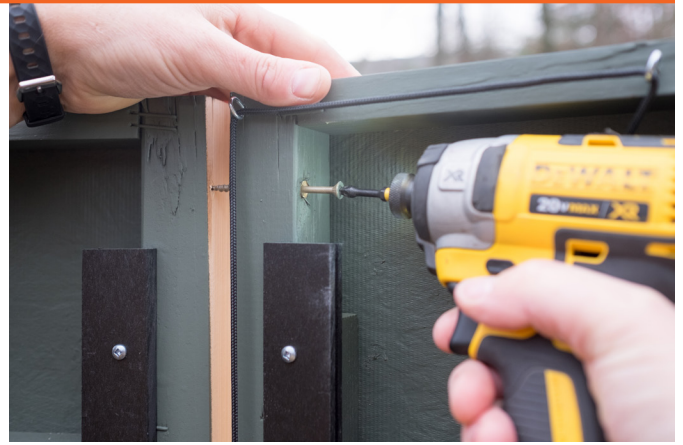

10

With the door panel and one wall panel remaining uninstalled, take this opportunity to maneuver the roof into place on top of the wall panels.



11

Before securing the roof, install the final wall panel and the door panel.



12

Screw the roof to the wall panels with the screws as shown here.



13

Screw the door panel to the floor as shown here.



14

Finish securing the wall panels by screwing each of them to the floor as shown.



15

Use the supplied touch up paint to cover up any scratches that may have been made during setup.



www.360huntingblinds.com